
91-2-R34


24 VDC, 22 pnp/npn digital inputs, including 2 analog inputs¹ and 3 high-speed counter/shaft encoder inputs, 12 relay outputs, I/O expansion port, RS232/RS485 port

Power supply	24VDC		
Permissible range	20.4VDC to 28.8VDC with less		
3	than 10% ripple		
Maximum current consumption	240mA@24VDC		
Digital inputs	22 pnp (source) or npn (sink)		
	inputs. See Notes 1 and 2.		
Nominal input voltage	24VDC. See Note 3.		
Input voltages for pnp (source):	0-5VDC for Logic '0'		
	17-28.8VDC for Logic '1'		
Input voltages for npn (sink):	17-28.8VDC/<1mA for Logic '0'		
	0-5VDC/>3mA for Logic '1'		
Input current	3.7mA@24VDC		
Input impedance	6.5ΚΩ		
Response time	10mS typical		
(except high-speed inputs)			
Galvanic isolation	None		
Input cable length	Up to 100 meters, unshielded		
High-speed counter	Specifications below apply when		
	inputs are wired for use as a high-		
	speed counter input/shaft		
	encoder. See Notes 4 and 5.		
Resolution	16-bit		
Input freq.	10kHz max.		
Minimum pulse	40µs		


Power supply, pnp (source) inputs

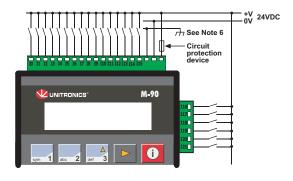


npn (sink) inputs

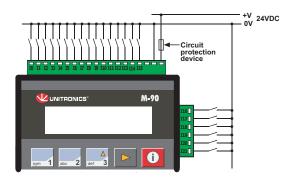


pnp (source) high-speed counter

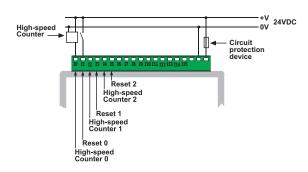

npn (sink) high-speed counter

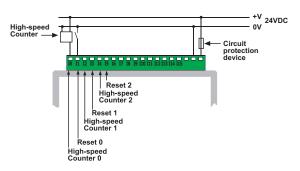

Shaft encoder

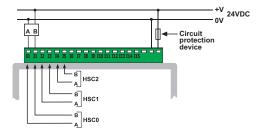

Notes:

- 1. The total number of inputs is 22. All of these may be used as normal digital inputs. Via jumper settings and wiring, certain of these inputs may be adapted to analog inputs
- 2. All 22 inputs can be set to pnp (source) or npn (sink) via a single jumper and appropriate wiring.
- 3. npn (sink) inputs use voltage supplied from the controller's power supply.
- 4. Inputs #0, #2 and #4 can each function as either high-speed counter or as part of a shaft encoder. In each case, high-speed input specifications apply. When used as a normal digital input, normal input specifications apply.
- 5. Inputs #1, #3 and #5 can each function as either counter reset, or as a normal digital input; in either case, specifications are those of a normal digital input. These inputs may also be used as part of a shaft encoder. In this case, high-speed input specifications apply.
- 6. To avoid electromagnetic interference, mount the controller in a metal panel/cabinet and earth the power supply. Earth the power supply signal to the metal using a wire whose length does not exceed 10cm. If your conditions do not permit this, do not earth the power supply.



- Unused pins should not be connected. Ignoring this directive may damage the controller.
- Improper use of this product may severely damage the controller.
- Refer to the controller's User Guide regarding wiring considerations.
- Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.




Analog Inputs	Two 10-bit, multi-range inputs:	
	0-10V, 0-20mA, 4-20mA	
	See Note 1 on page 1	
Conversion method	Successive approximation	
Input impedance	>150K Ω for voltage	
	243Ω for current	
Galvanic isolation	None	
Resolution (except 4-20mA)	10-bit (1024 units)	
Resolution at 4-20mA	204 to 1023 (820 units)	
Conversion time	Synchronized to scan time	
Absolute max. rating	±15V/30mA	
Full scale error	± 2 LSB	
Linearity error	± 2 LSB	
Status indication	Yes, See Note	

Note

The analog value can also indicate when the input is functioning out of range. If an analog input deviates above the permissible range, its value will be 1024.


Voltage connection

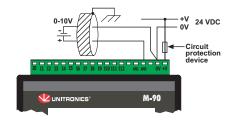



Notes:

- a. Shields should be connected at the signals' source.
- b. The 0V signal of the analog input must be connected to the controller's 0V.

Current connections

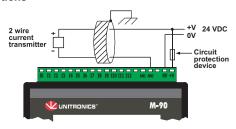

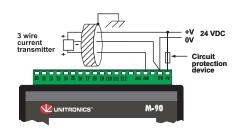

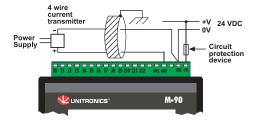


Relay outputs 12 relay (in 3 groups) See Note Output type SPST-NO (Form A) Tyco PCN-124D3MHZ Type of relay or compatible Isolation by relay Output current (resistive load) 3A max per output 8A max total for common Rate voltage 250VAC / 30VDC Minimum load 1mA@5VDC Life expectancy 100k operations at maximum load Response time 10mS (typical) Contact protection External precautions required (see below)

Note:

Outputs #0, #1, #2 and #3 share a common signal. Outputs #4, #5, #6 and #7 share a common signal. Outputs #8, #9, #10 and #11 share a common signal.

Relay Outputs


- Each Output can be wired separately to either AC or DC as shown below.
- The 0V signal of the relay outputs is isolated from the controller's 0V signal.

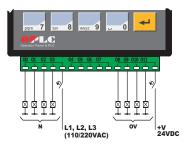

Increasing Contact Life Span

To increase the life span of the relay output contacts and protect the device from potential damage by reverse EMF. connect:

- a clamping diode in parallel to each inductive DC load.
- an RC snubber circuit in parallel with each inductive AC load.

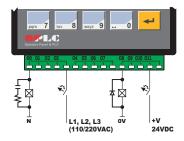

Notes:

- a. Shields should be connected at the signals' source.
- b. The 0V signal of the analog input must be connected to the controller's 0V.



Display	STN, LCD display		
Illumination	LED yellow-green backlight		
Display size	2 lines, 16 characters long		
Character size	5 x 8 matrix, 2.95 x 5.55mm		
Keypad	Sealed membrane		
Number of keys	15		
PLC program			
Ladder Code Memory (virtual)	36K		
Memory Bits (coils)	256		
Memory Integers (Registers)	256		
Timers	64		
Execution time	12µsec. for bit operations		
Database	1024 integers (indirect access)		
HMI displays	80 user-designed displays		
HMI variables	64 HMI variables are available to		
	conditionally display and modify		
	text, numbers, dates, times & timer		
	values. The user can also create		
	a list of up to 120 variable		
	text displays, totaling up to 2K.		
	toxt diopidyo, totaling up to Ert.		
RS232/RS485 serial port	Used for:		
RS232/RS485 serial port	Used for: • Application Download/Upload		
RS232/RS485 serial port	Used for: • Application Download/Upload • Application Testing (Debug)		
RS232/RS485 serial port	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard		
RS232/RS485 serial port	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem:		
RS232/RS485 serial port	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages		
RS232/RS485 serial port	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming		
	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming • RS485 Networking		
RS232 (see note)	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming • RS485 Networking 1 port		
RS232 (see note) Galvanic isolation	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming • RS485 Networking 1 port None		
RS232 (see note) Galvanic isolation Voltage limits	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming • RS485 Networking 1 port None ±20V		
RS232 (see note) Galvanic isolation Voltage limits RS485 (see note)	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming • RS485 Networking 1 port None ±20V 1 port		
RS232 (see note) Galvanic isolation Voltage limits RS485 (see note) Input voltage	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming • RS485 Networking 1 port None ±20V 1 port -7 to +12V differential max.		
RS232 (see note) Galvanic isolation Voltage limits RS485 (see note)	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming • RS485 Networking 1 port None ±20V 1 port -7 to +12V differential max. Shielded twisted pair,		
RS232 (see note) Galvanic isolation Voltage limits RS485 (see note) Input voltage Cable type	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming • RS485 Networking 1 port None ±20V 1 port -7 to +12V differential max. Shielded twisted pair, in compliance with EIA RS485		
RS232 (see note) Galvanic isolation Voltage limits RS485 (see note) Input voltage Cable type Galvanic isolation	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming • RS485 Networking 1 port None ±20V 1 port -7 to +12V differential max. Shielded twisted pair, in compliance with EIA RS485 None		
RS232 (see note) Galvanic isolation Voltage limits RS485 (see note) Input voltage Cable type	Used for: • Application Download/Upload • Application Testing (Debug) • Connect to GSM or standard telephone modem: - Send/receive SMS messages - Remote access programming • RS485 Networking 1 port None ±20V 1 port -7 to +12V differential max. Shielded twisted pair, in compliance with EIA RS485		

	A	v	rc	7.	
E	0	C	2	2	
Г	7	c	2	٠.	4

Note: RS232/RS485 is determined by jumper settings and wiring, as described in the document "M91 RS485 Port Settings" packaged with the controller.

I/O expansion port	Up to 64 additional I/Os, including		
	digital & analog I/Os, RTD & more.		
Miscellaneous			
Clock (RTC)	Real-time clock functions (Date and Time).		
Battery back-up	7 years typical battery back-up for RTC and system data.		
Weight	310g (10.9 oz.)		
Operational temperature	0 to 50°C (32 to 122°F)		
Storage temperature	-20 to 60°C (-4 to 140°F)		
Relative Humidity (RH)	5% to 95% (non-condensing)		
Mounting method	DIN-rail mounted (IP20/NEMA1)		
	Panel mounted (IP65/NEMA4X)		





Jumper Settings

The tables below show how to set a specific jumper to change the functionality of the controller. To open the controller and access the jumpers, refer to the directions at the end of these specifications.


Important:

Incompatible jumper settings and wiring connections may severely damage the controller.

	Jumper #	NPN	PNP*	
Digital Inputs	JP3	А	В	


	Jumper #	Voltage	Current	Digital*
Analog 1 / I14	JP1	А	А	В
	JP4	А	В	В
Analog 0 / I15	JP2	А	А	В
	JP5	А	В	В

^{*}Default factory setting

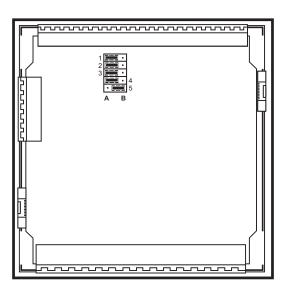

In this figure, the jumper settings will cause the controller to function as follows:

Digital inputs: npn, 24VDC inputs Analog input 1: Voltage input Analog input 0: Current input

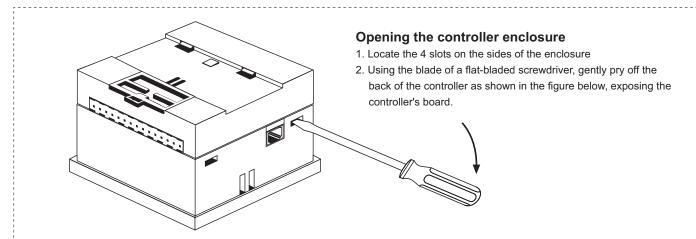

Unitronics reserves the right to revise this publication from time to time and to amend its contents and related hardware and software at any time.

Technical undates (if any) may be included in subsequent editions (if any).

Technical updates (if any) may be included in subsequent editions (if any). Unitronics product sold hereunder can be used with certain products of other manufacturers at the user's sole responsibility.

