

◆ Manual / 使用說明:


Output Indicator/輸出指示燈


Mode Switch/功能選擇鍵

Sensitivity Adjuster (Function Select)
/敏感度調整L.on/D.on Switch
L.on/D.on選擇鍵


功能配置：可設定所有的功能

如果在設定的時候，您可以利用簡單的選項來使用所有的功能

Please select FUN./
選擇到FUN.模式Mode Switch/
模式選擇鍵Function Switch/
功能設定鍵

Mode Switch/模式選擇鍵		設定選項			
 signal pulse/ 感測距離	  standard/ 標準距離	 long pulse/ 加長距離			
	  50% power/ 一半功率	 standard/ 標準功率			
	  no delay/ 無延遲	 on delay/ 開啓延遲	 off delay/ 關閉延遲		
	 on one shot/ 上微分觸發	 off one shot/ 下微分觸發			
	  2ms	 20ms	 50ms	 100ms	
	 500ms	 1s	 5s	 10s	
	  obverse/ 視窗正向	 reverse/ 視窗反向			
Please select SET./ 選擇到SET.模式		Please select   to adjust sensing distance./ 選擇上下調整鍵   設定感應數值			
Please select RUN./ 選擇到RUN.模式		Operating mode/ 開始工作模式			
Example: To make BR2 on-delay 5 s, when it is in operating situation. / 範例: 設定時間通電延遲5秒					
Step1/步驟一: Please select FUN./ 選擇到 FUN. 模式	Step2/步驟二: Minus Button/ 模式選擇鍵	Step3/步驟三: Plus Button/ 功能設定鍵	Step4/步驟四: Minus Button/ 模式選擇鍵	Step5/步驟五: Plus Button/ 功能設定鍵	
	 delay/ 時間延遲設定	 on delay/ 開啓延遲	 delay time/ 延遲秒數設定	 5s /5秒	

◆ Operation timing chart / 時序圖：

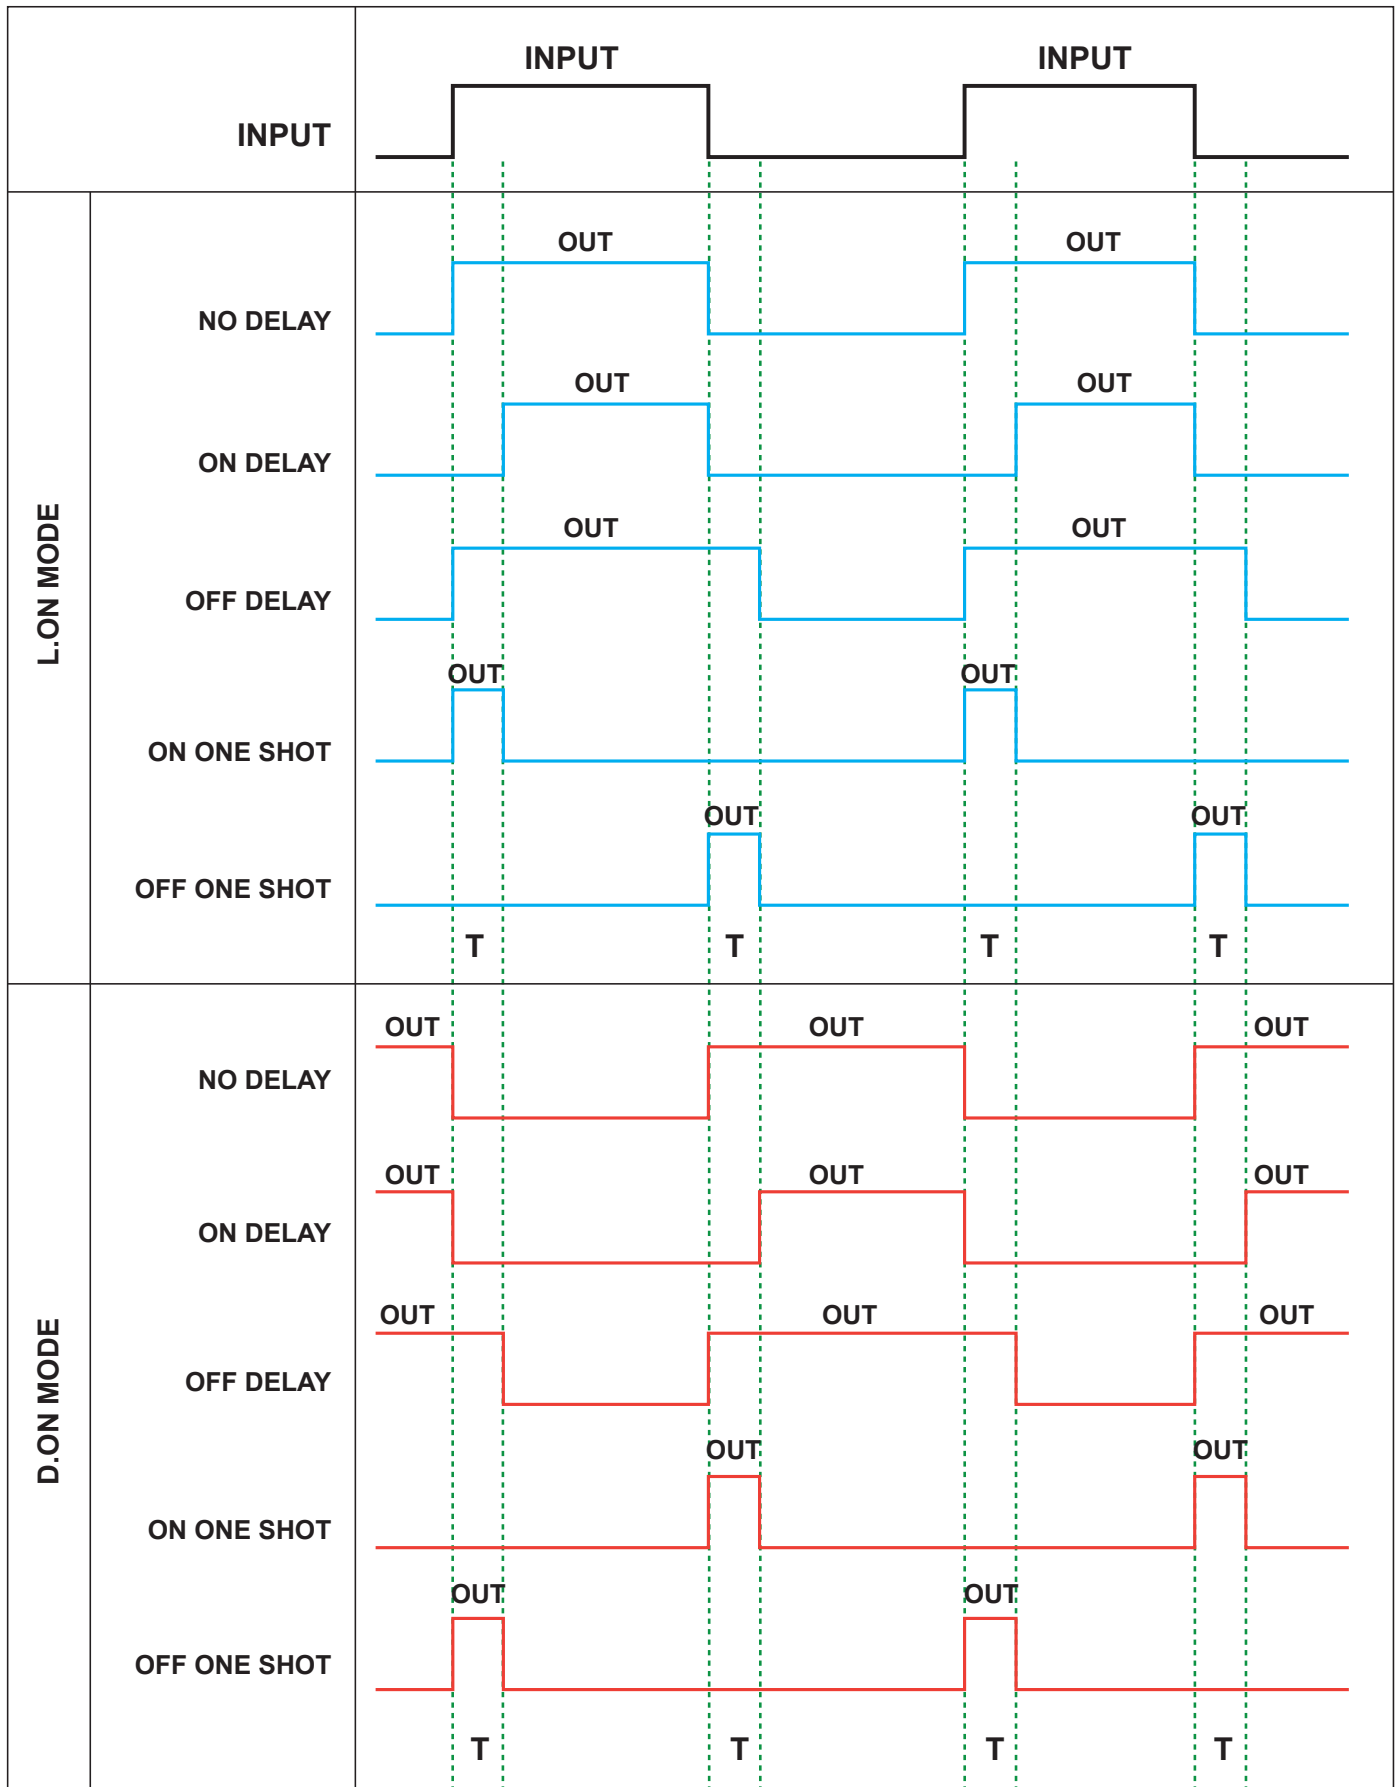

燈號與輸出同步

DELAY TIME : 2ms ; 20ms ; 50ms ; 100ms ; 500ms

DELAY TIME : 1S ; 5S ; 10S


◆ Side mounting of amplifier / 放大器固定之組裝：

* Attached mounting bracket. Fixing it up by 2pcs M3 screws. The torque must be 0.8Nm or less. /內附托架，並使用M3螺絲穿過固定孔旋緊，但扭力不可超過0.8Nm。


◆ Fiber amplifier mounting/detaching operation / 光纖放大器安裝方式：

1. Mounting / 安裝

(1) To mount each amplifier to the attached mounting bracket or DIN rail in sequence. /將每一台依序裝至軌道上。

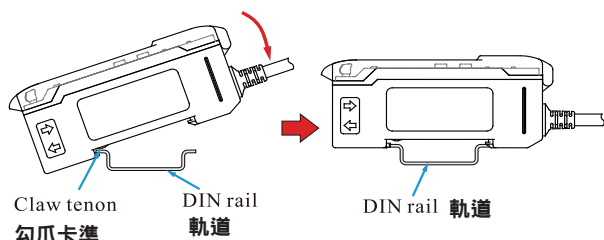

(2) To connect two amplifiers close together by sliding the amplifier bodies. /滑動本體，依序將放大器密和即可。

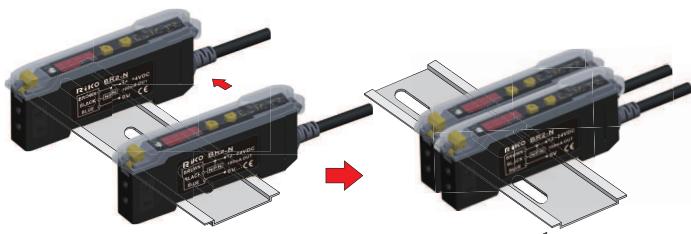

2. Detaching / 卸下


To detach the amplifiers in sequence by sliding the amplifier bodies. Don't detach two amplifiers at a time. /滑動本體，依序將各台卸下。



◆ Fiber cables fixing operation :

1. Insert the fiber cables / 插入光纖


Open the protective hood and tilt the fiber lock lever to release the lock condition. Referring to the side seal of insertion position, fully insert the fiber cables into the mounting holes until the limit. Pull the fiber lock lever back to lock the cables. /開啟保護蓋並先壓下光纖固定桿，以解除鎖定狀態，依照光纖放大器側面插入位置記號插入光纖，再將光纖固定桿扳起鎖定。

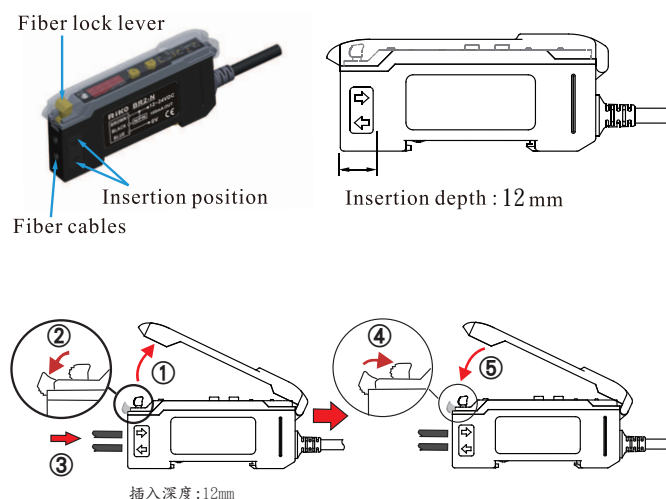

- ① Open the protective hood./ 掀開保護透明蓋。
- ② Tilt the fiber lock lever to release the lock condition./ 解除鎖定狀態。
- ③ Insert the fiber cables./ 插入光纖。
- ④ Pull the fiber lock lever back to lock the cables./ 鎖定狀態。
- ⑤ Close the protective hood./ 蓋起保護透明蓋。

2. Pull out the fiber cables / 拔出光纖

Open the protective hood and tilt the fiber lock lever to release the lock condition. Pull the fiber cables straight out from the mounting holes. /開啟保護蓋並光纖固定桿，以解除鎖定狀態，即可拔出光纖。

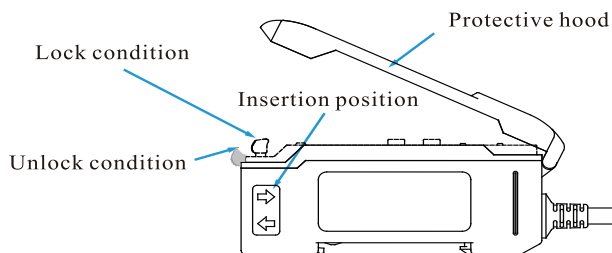

Be sure to switch off the power supply when mounting or detaching the amplifier.

/當您要安裝或卸下光纖放大器時，請先確認電源已關閉。

To protect the fiber cables from incorrect operation, be sure to tilt the fiber lock lever to release the lock condition before pulling out the fiber cables.

/為了維護光纖，請在更換時，確定光纖固定桿為解除鎖定後，再將光纖拔出。