LITEON

Open Collector PG Option Card User Manual

a. Warning

1. Read the manual before installing EVO8-PG-O.

2. Use shielded control cable to prevent noise interference. Separate it from the main

circuit cable, power cable and relay circuit.

3. EVO8-PG-O only works with Open Collector encoders with the maximum cable length

50 meters.

4. The maximum response of EVO8-PG-O is 100 kHz.

b. Installation

1. Please refer to "c. Installation Illustration".

2. Shut down the main circuit power, wait until the " CHARGE" indicator light is off. Then open the EVO 8000 AC drive terminal cover and front cover.

3. Connect the connector PJ4 on PG card to connector J3 (14 pins) on the drive control board, *Refer parameter details to EVO8000 user manual.

and affix the plastic bar through the hole on the PG card until " click" sound.


4. Connect the ground terminal PE on the PG card to the ground terminal PE on the control

board.

5. Connect the control cable to the EVO8-PG-O terminals.

6. Affix the front cover and the terminal cover back to the drive.

c. Installation Illustration

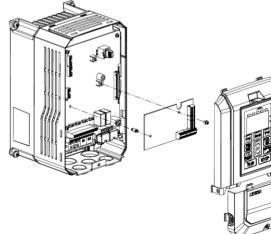

f. EVO8-PG-O Appearance

| PTB2 Pulse output terminal |
|--|
| A MAR AND |
| Encoder powerPTB1 Encoder signalsupply S/Winput terminal |

| l d. Para | ameter Setti | Terminal Code | Description | |
|--------------------|-----------------------------|---|------------------------------|---|
| AC Drive Parameter | | Description | PTB1 VG | Encoder power connector |
| A1-02 | Control Method Selection | Select the control | PTB2 VG | Pulse output Pull High pov 50mA |
| | | method with PG card | IG | Power and input signal lev |
| | | Sets the number of | A1,/A1, B1,/B1, | Encoder signal input ter must be 2 phase to hav |
| | PG Number of | pulses per | Z1, /Z1 | output. |
| t1-08 | Pulses Per Revolution | revolution for the PG (pulse generator or encoder). | AO,/AO, BO,/BO, ZO,/ZO | A and B phase division phase monitor output ter |
| F1 group | PG Card Settings | Set the parameters for PG option card | A2,/A2, B2,/B2 | Terminal for controller A (Accept command wher followed by the B pulse di |
| *Refer para | meter details to EVO | 8000 user manual | | |

e. Terminals

| Ferminal Code | Description | | | | |
|---|---|--|--|--|--|
| PTB1 VG | Encoder power connector,12.5/5.5V +-5% , 200mA | | | | |
| PTB2 VG | Pulse output Pull High power connector , 24V +-5% , 50mA | | | | |
| G | Power and input signal level | | | | |
| A1,/A1, 31,/B1, Z1, /Z1 AO,/AO, 30,/BO, ZO,/ZO | Encoder signal input terminal. The power supply must be 2 phase to have the correct division rati output. A and B phase division ratio output terminal , Z phase monitor output terminal. Need Pull High. | | | | |
| A2,/A2, 32,/B2 PE | Terminal for controller A, B phase command inpu (Accept command when the A pulse leads or followed by the B pulse displaced at 90 degrees) Group terminal | | | | |
| | | | | | |

g. Wiring 1. OPEN COLLECTOR TYPE

